


SERVICE MANUAL
STEREO INTEGRATED AMPLIFIER
MODEL DA-U41P

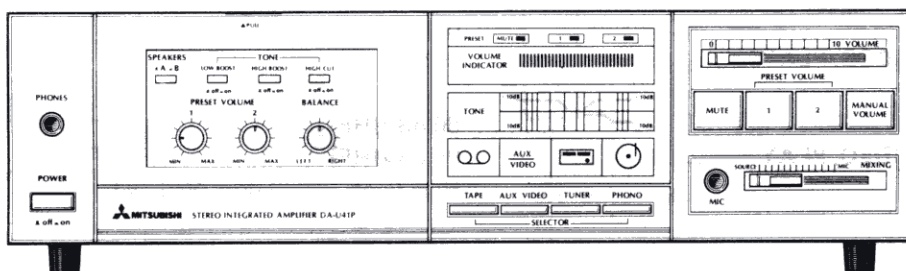


CONTENTS

SPECIFICATIONS	2
DISASSEMBLY INSTRUCTIONS	2
BLOCK DIAGRAM	3
INTERNAL DIAGRAMS AND PINOUT OF INTEGRATED CIRCUIT	4
WIRNG DIAGRAM	5
SCHEMATIC DIAGRAM	7
PRINTED CIRCUIT BOARDS	9
EXPLODED VIEW	11
PARTS LIST	12
PACKING INSTRUCTIONS	14

SCHEMATIC DIAGRAM

2 3 4

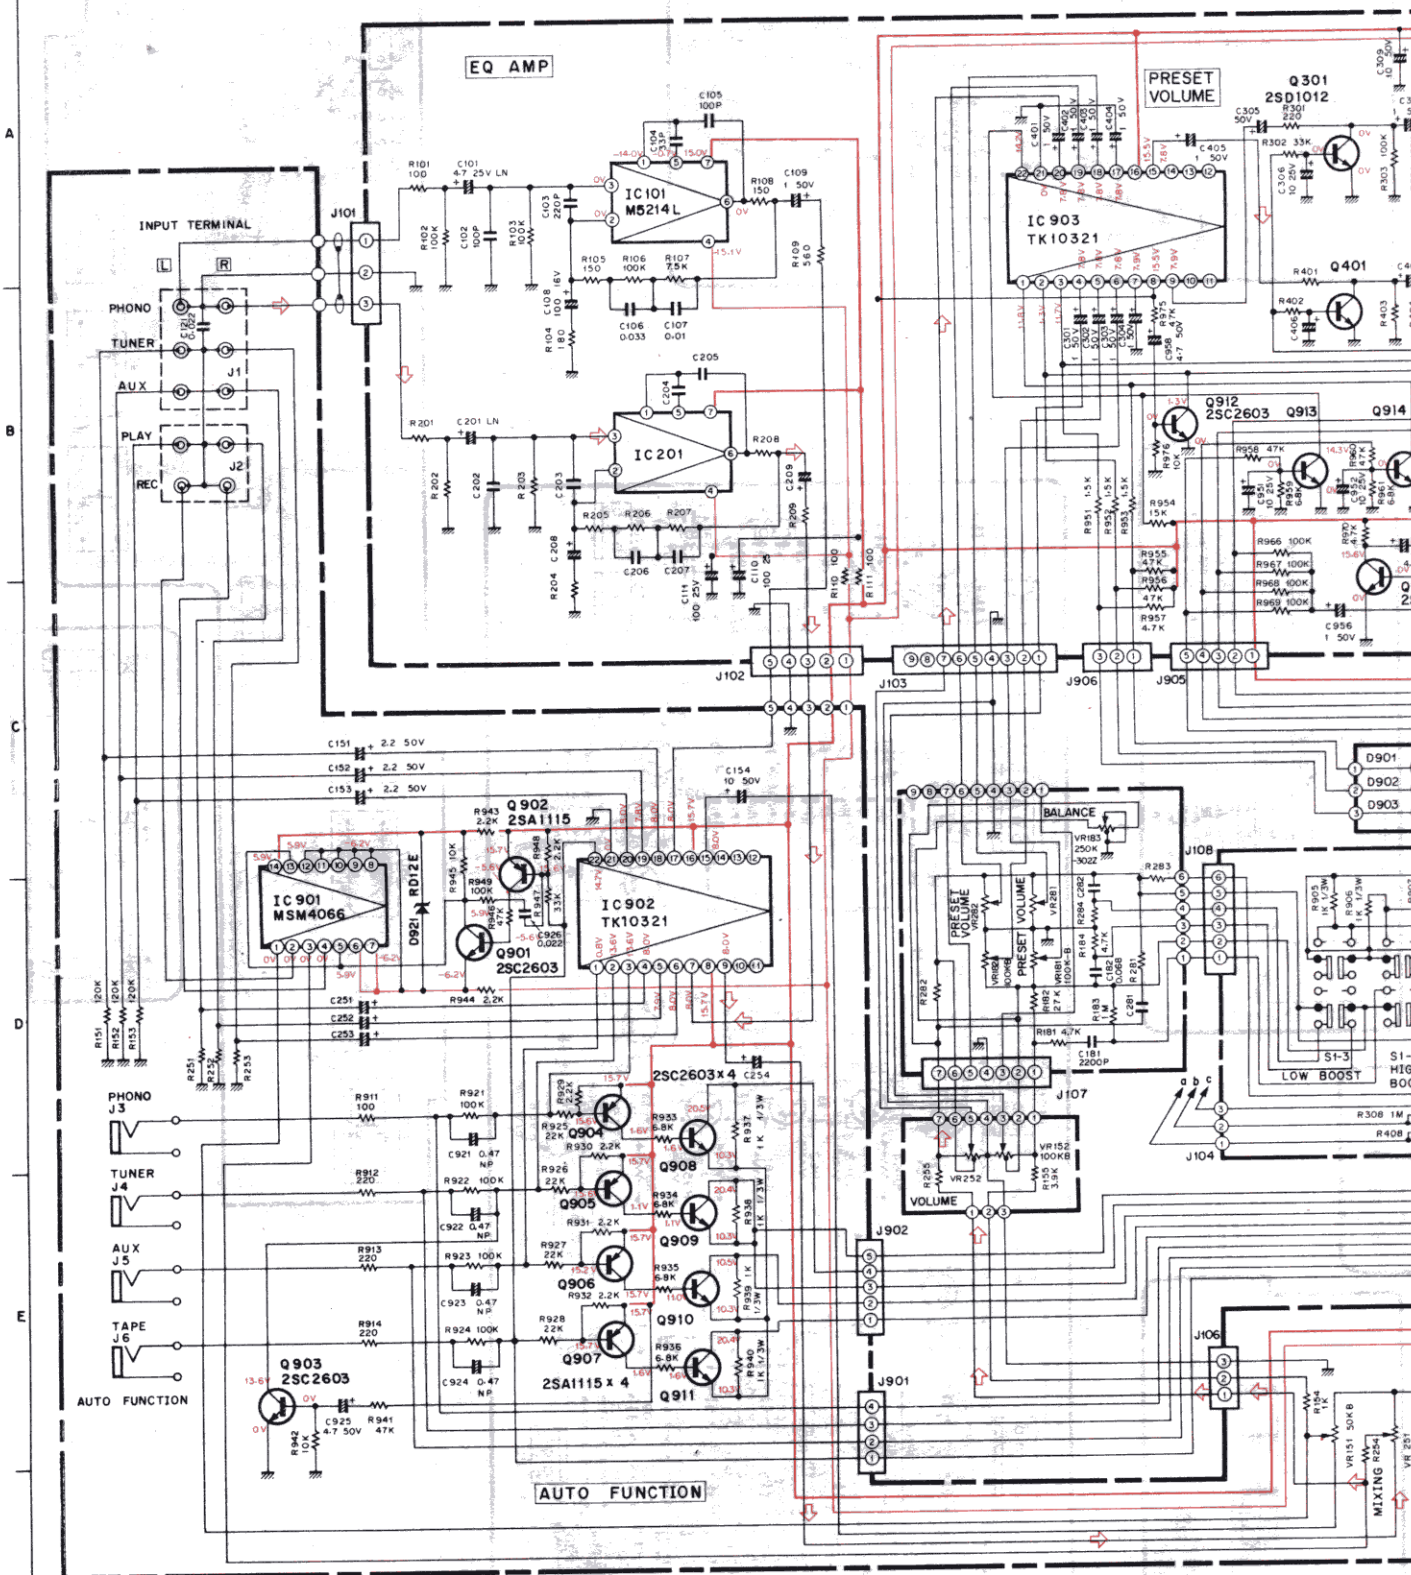





NOTES:

- 1. C and R unit
- C No symbol : μ F
- P P symbol : pF
- Capacitor without voltage display has pressure resistance of 50V.
- The NP is a Nonpolar Capacitors.
- R No symbol : Ω
- K symbol : k Ω
- M symbol : M Ω
- Resistance not designated is 1/4W, J(5%).

- 2. This mark indicates the fuse resistor. Always use the designated service part at time of exchange.
- 3. Voltage for all parts are measured in terms of DC 1M Ω digital voltmeter.
- 4. Parts marked with or are vital for maintenance of safety and performance. Be sure only designated parts are used for replacement.
- 5. The circuit figure shown here is the basic circuit diagram. Please note that changes in dimensions may occur as a result of improvements, etc.

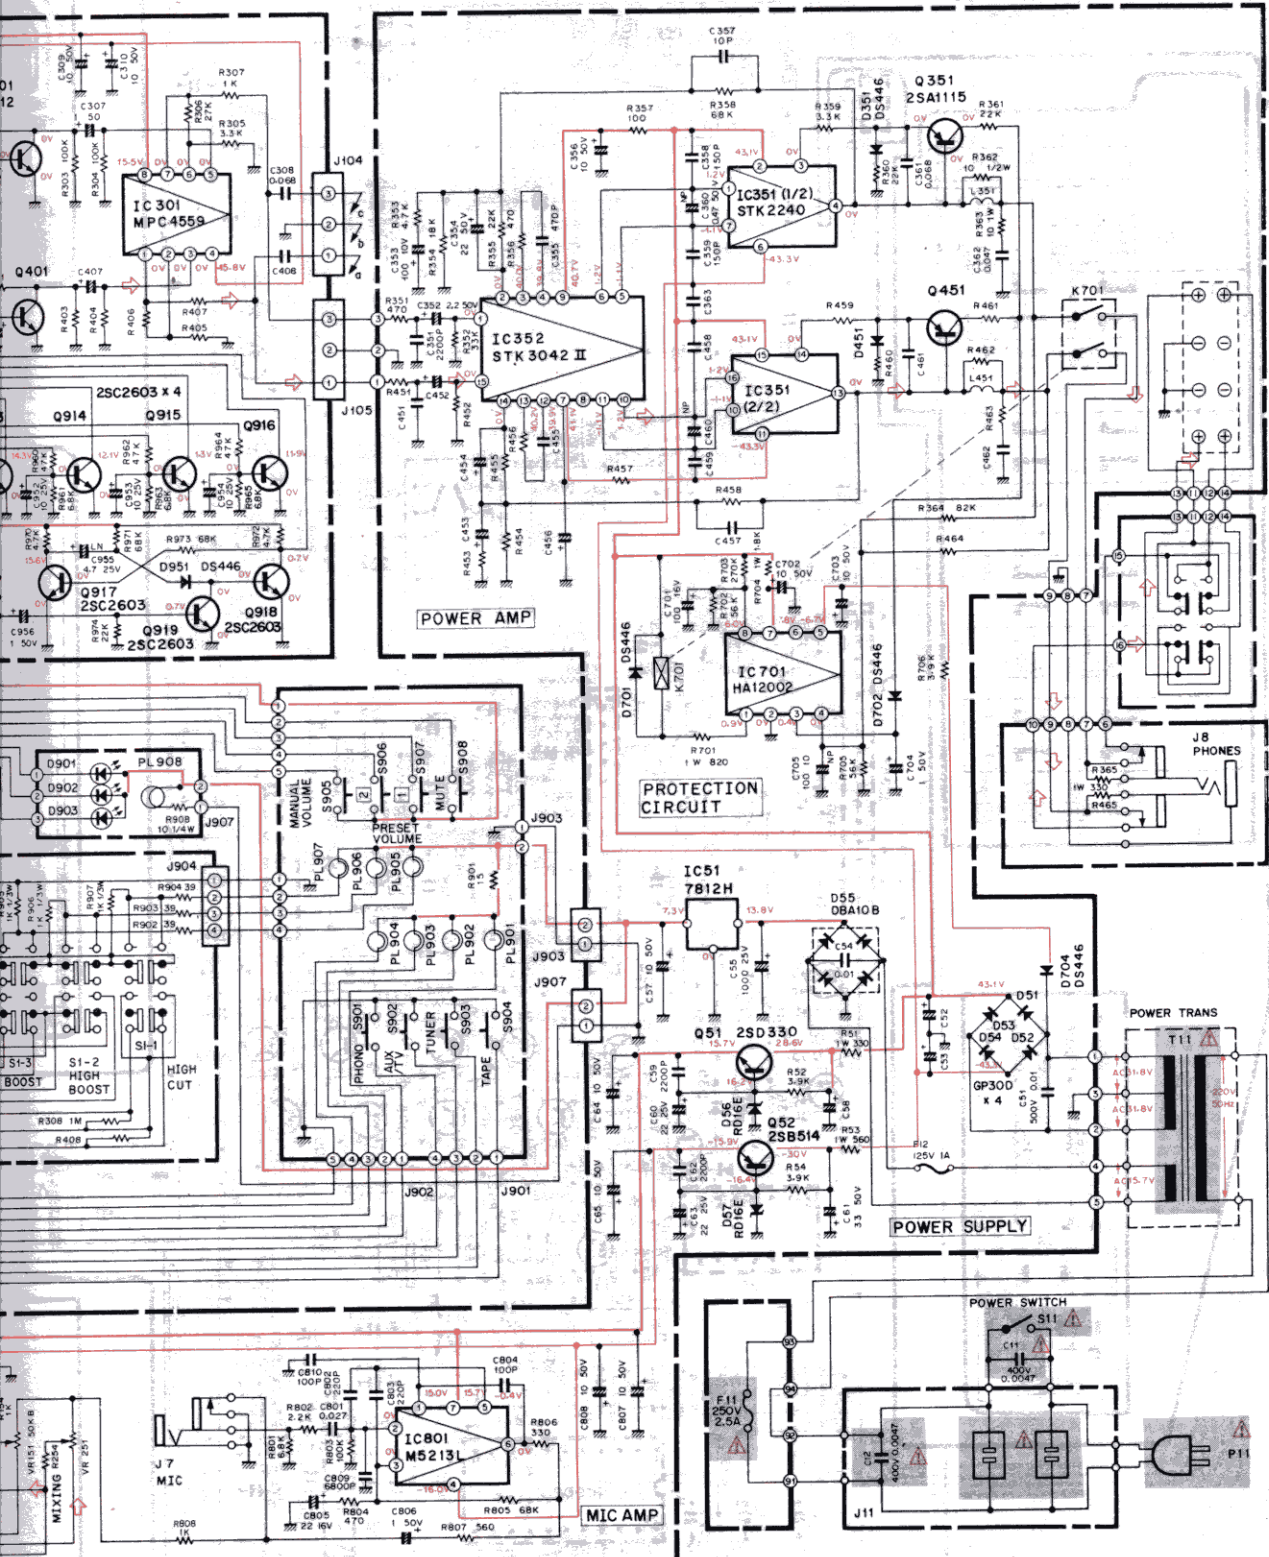5 6 7 8



- 
 ECB
 2SA115
 2SC2603
- 
 ECB
 2SD1012
- 
 BCE
 2SB514
 2SD330